


ZONING AND LAND DEVELOPMENT

94 Attachment 2

Borough of Shrewsbury

Figure 1: Time of Concentration

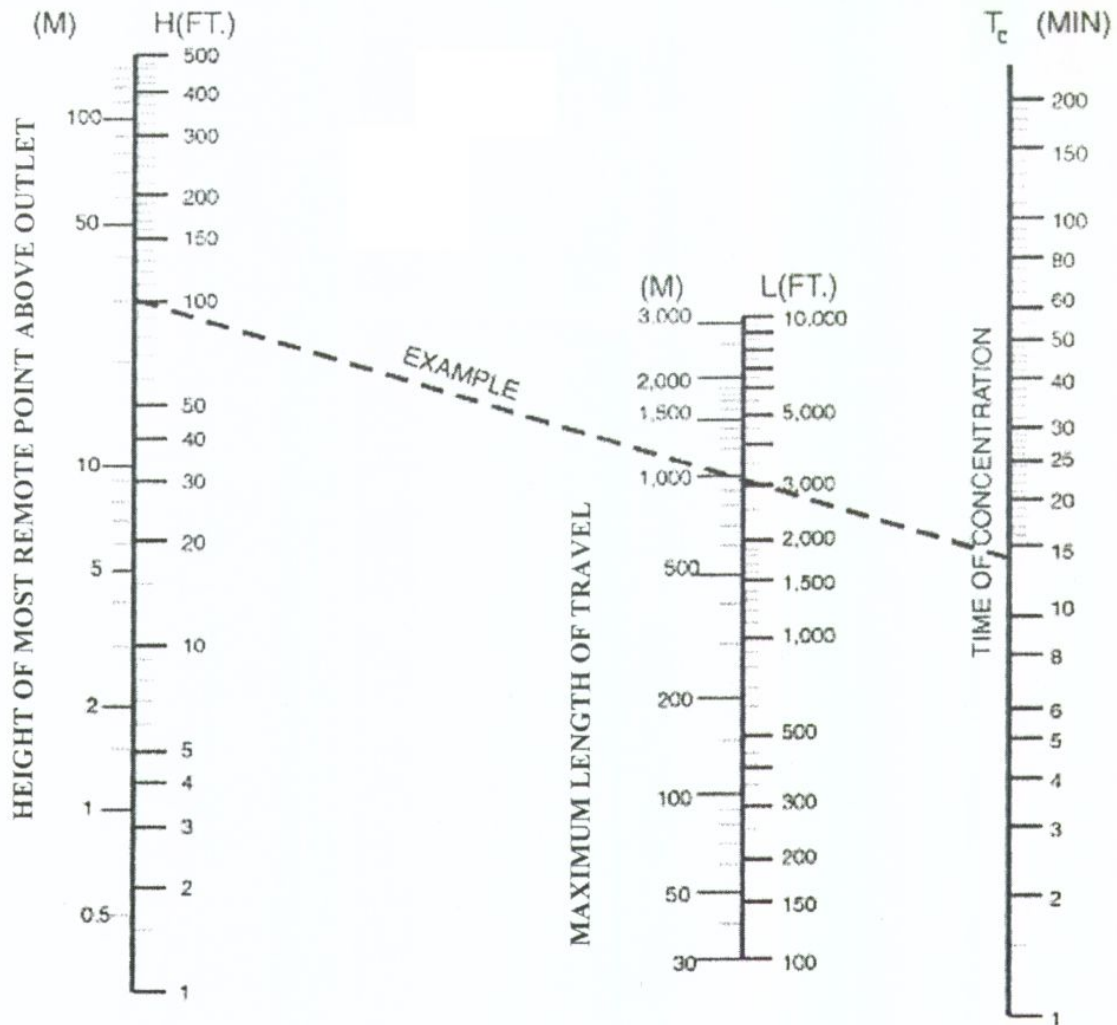

NOTES:

Use Nomograph T<sub>c</sub> for natural basins with well-defined channels, for overland or bare earth, and for mowed grass roadside channels.

For overland flow, grassed surfaces, multiply T<sub>c</sub> by 2.

For overland flow, concrete or asphalt services, multiply T<sub>c</sub> by 0.4.

For concrete channels, multiply T<sub>c</sub> by 0.2 overland flow.